

How to change front anti roll bar bushes on **Skoda Fabia 6Y5** – replacement guide

VIDEO TUTORIAL



Important!

This replacement procedure can be used for:
SKODA Fabia I Hatchback (6Y2) 1.4 16V, SKODA Fabia I Hatchback (6Y2) 1.4, SKODA Fabia I Hatchback (6Y2) 1.9 SDI, SKODA Fabia I Hatchback (6Y2) 1.0, SKODA Fabia I Hatchback (6Y2) 1.9 TDI, SKODA Fabia I Combi (6Y5) 1.4, SKODA Fabia I Combi (6Y5) 1.9 SDI, SKODA Fabia I Combi (6Y5) 1.4 16V, SKODA Fabia I Combi (6Y5) 1.9 TDI, SKODA Fabia I Combi (6Y5) 2.0, SKODA Fabia I Hatchback (6Y2) 2.0, SKODA Fabia I Saloon (6Y3) 1.9 TDI, SKODA Fabia I Saloon (6Y3) 1.4 16V, SKODA Fabia I Saloon (6Y3) 1.9 SDI, SKODA Fabia I Saloon (6Y3) 1.4, (+ 9)

The steps may slightly vary depending on the car design.

REPLACEMENT: ANTI ROLL BAR BUSHES – SKODA FABIA 6Y5. LIST OF THE TOOLS YOU'LL NEED:



- Wire brush
- WD-40 spray
- Copper grease
- Drive socket # 13
- Combination spanner #13
- Wheel impact socket #17
- Torque wrench
- Crow bar
- Hydraulic transmission jack
- Wheel chock

BUY TOOLS

Replacement: anti roll bar bushes – Skoda Fabia 6Y5. AUTODOC experts recommend:


- Both stabilizer bushes should be replaced simultaneously.
- The replacement procedure is identical for the right and left stabilizer bushes.
- All work should be done with the engine stopped.

REPLACEMENT: ANTI ROLL BAR BUSHES – SKODA FABIA 6Y5. USE THE FOLLOWING PROCEDURE:


1 Secure the wheels with chocks.




2 Loosen the wheel mounting bolts. Use wheel impact socket #17.

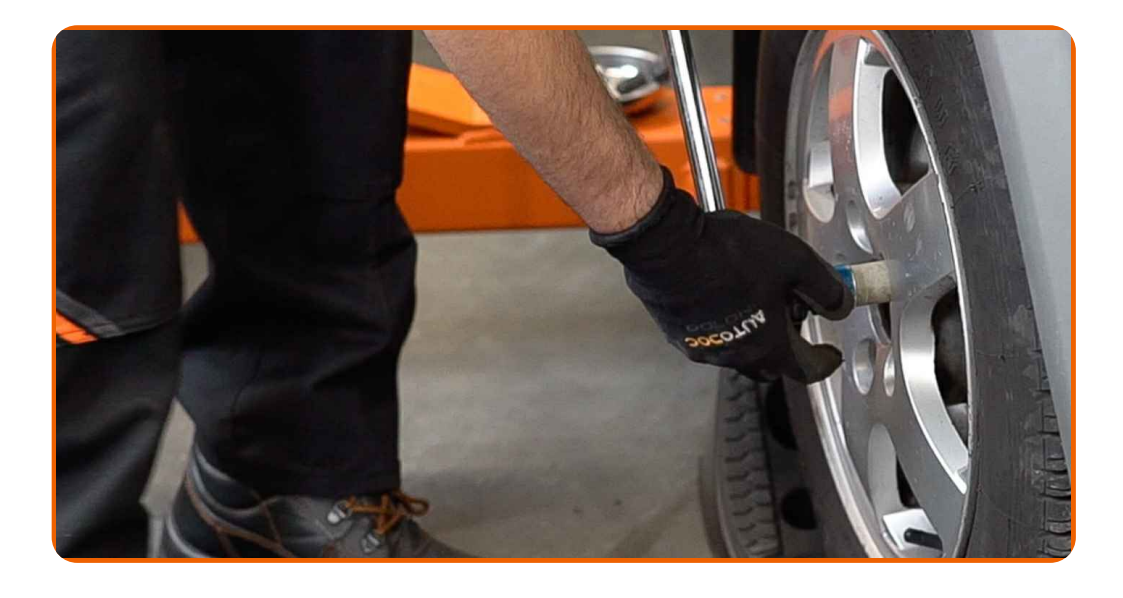

3 Raise the front of the car and secure on supports.

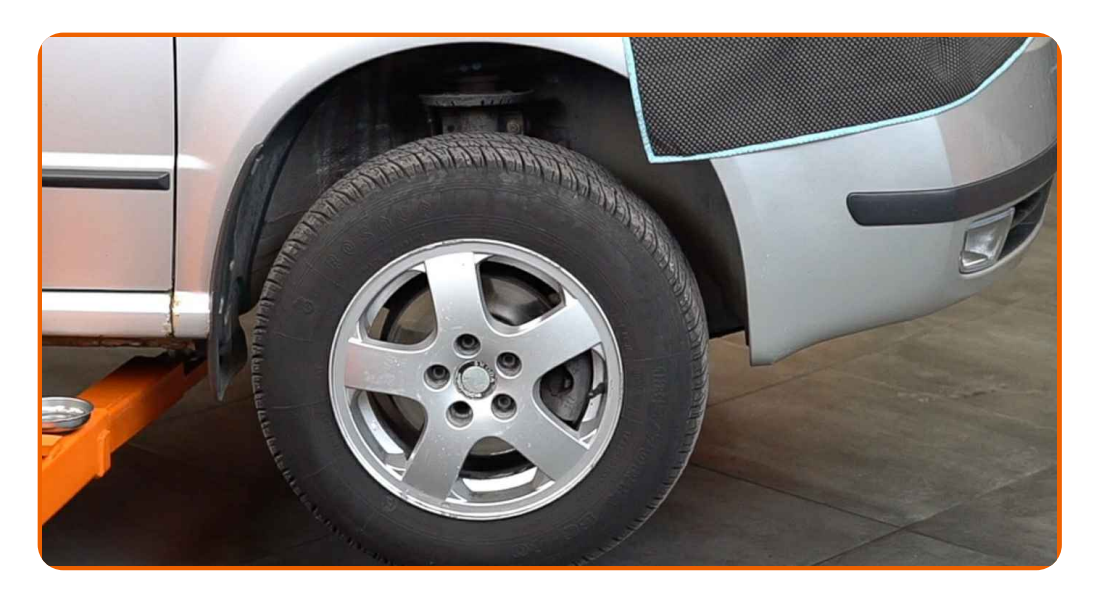


4 Unscrew the wheel bolts.

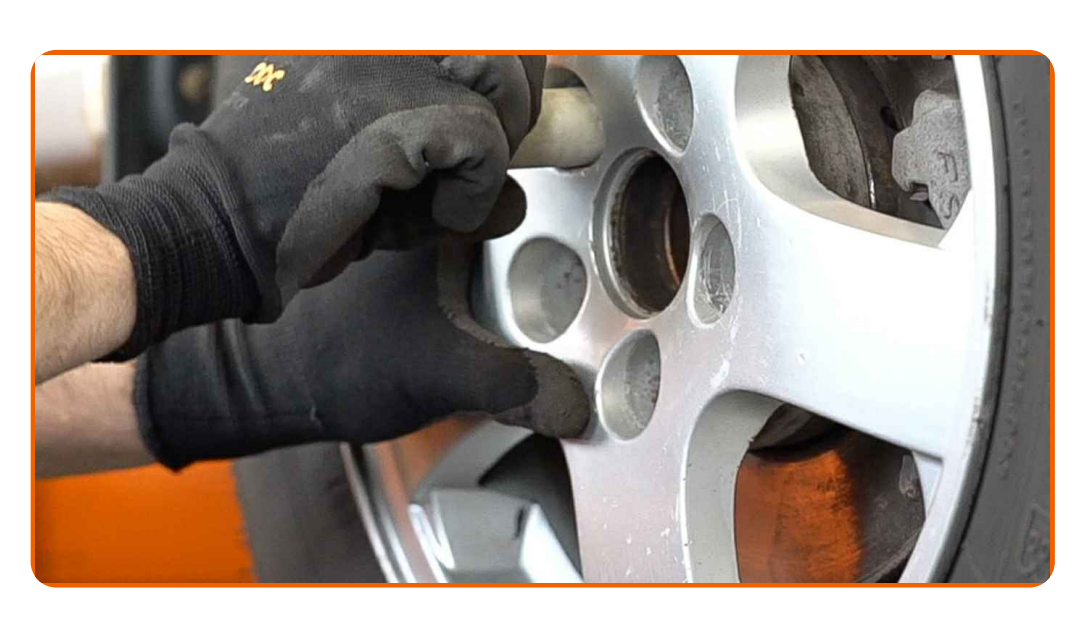


AUTODOC recommends:

- To avoid injury, hold up the wheel when unscrewing the bolts.


5 Remove the wheel.

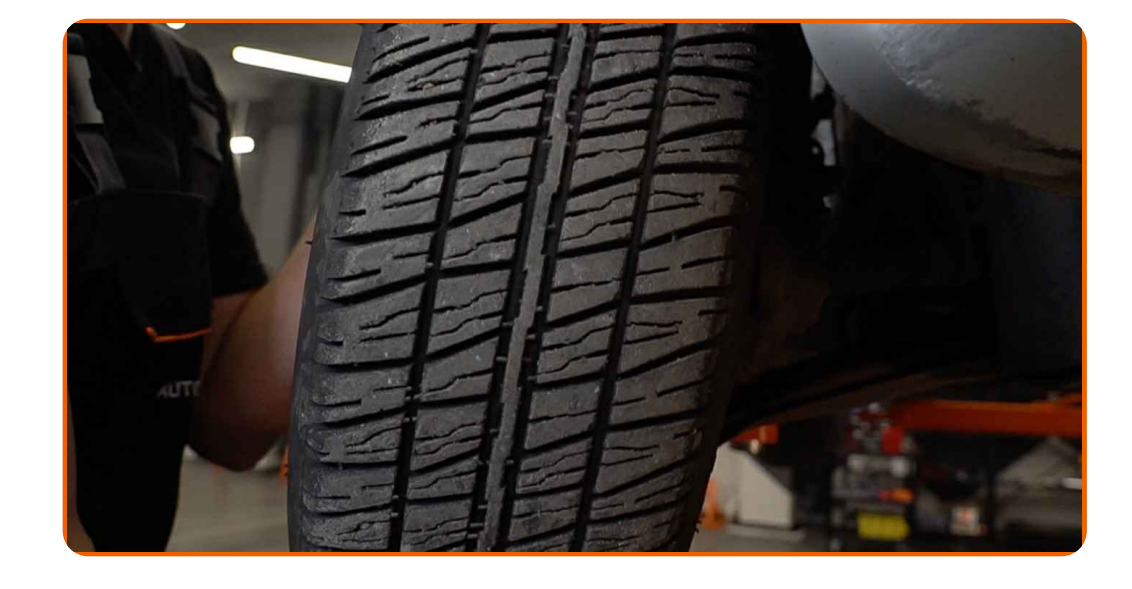

6 Clean the fasteners of the stabilizer bush brackets. Use a wire brush. Use WD-40 spray.

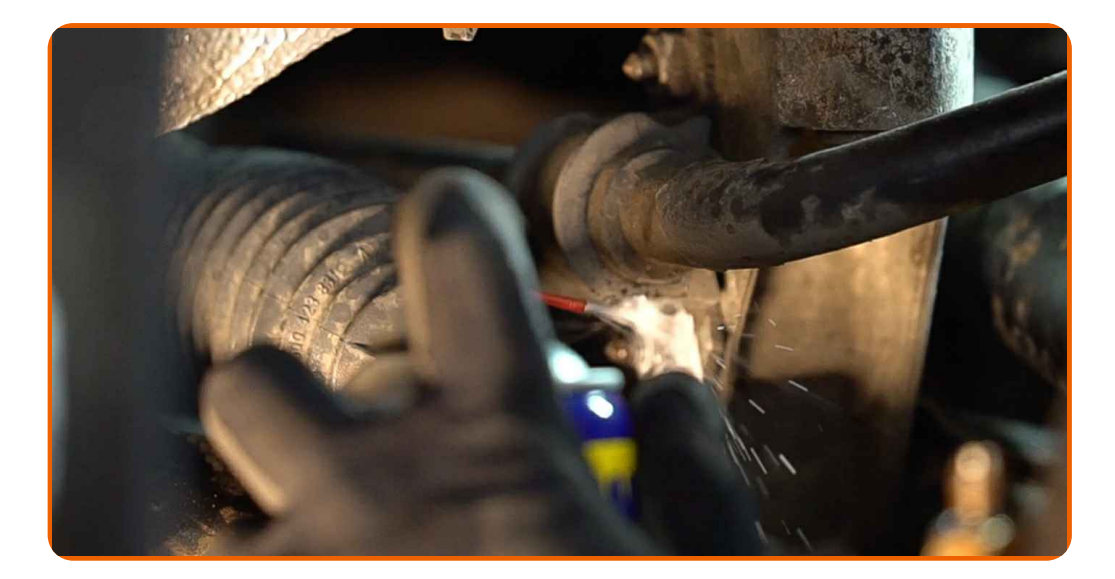


7 Unscrew the fasteners of the stabilizer bush brackets. Use a combination spanner #13.

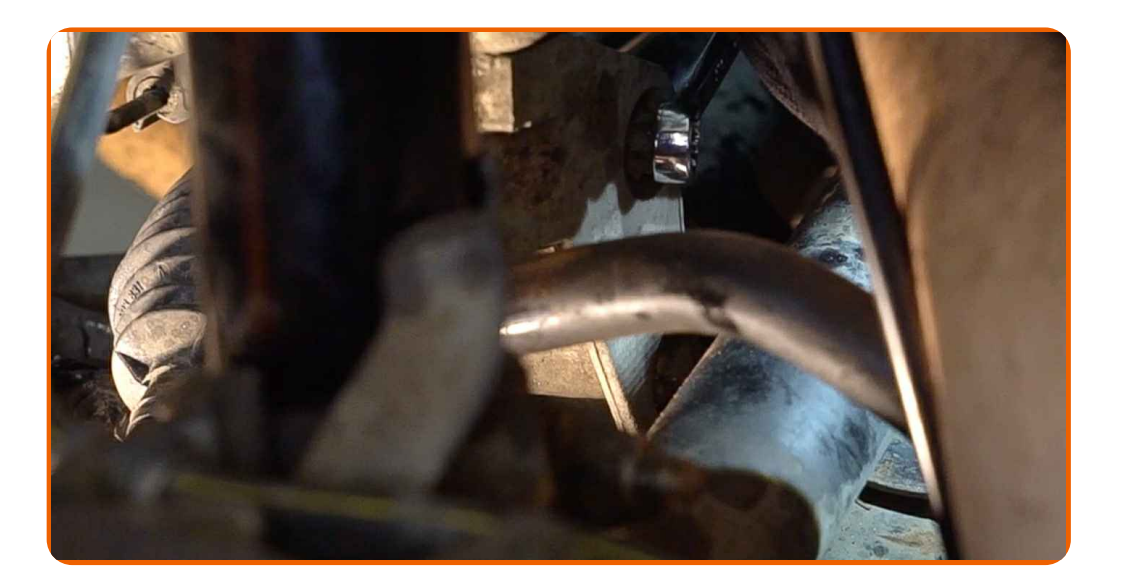


8 Support the arm. Use a hydraulic transmission jack.



9 Remove the fastening bolts (2 pieces).

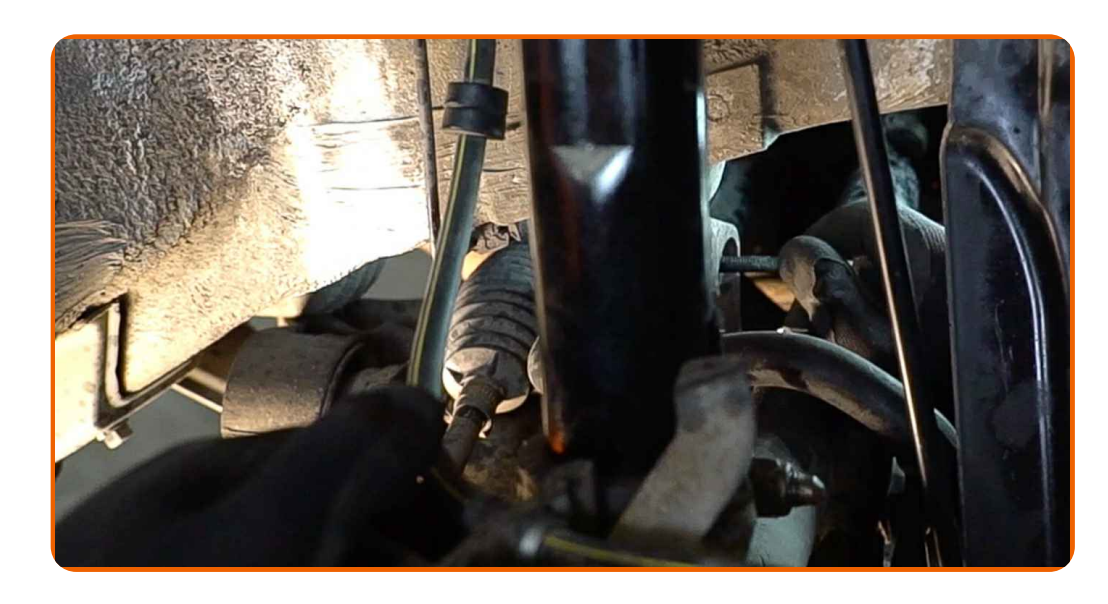


10 Lower the hydraulic transmission jack by 10-15 cm.

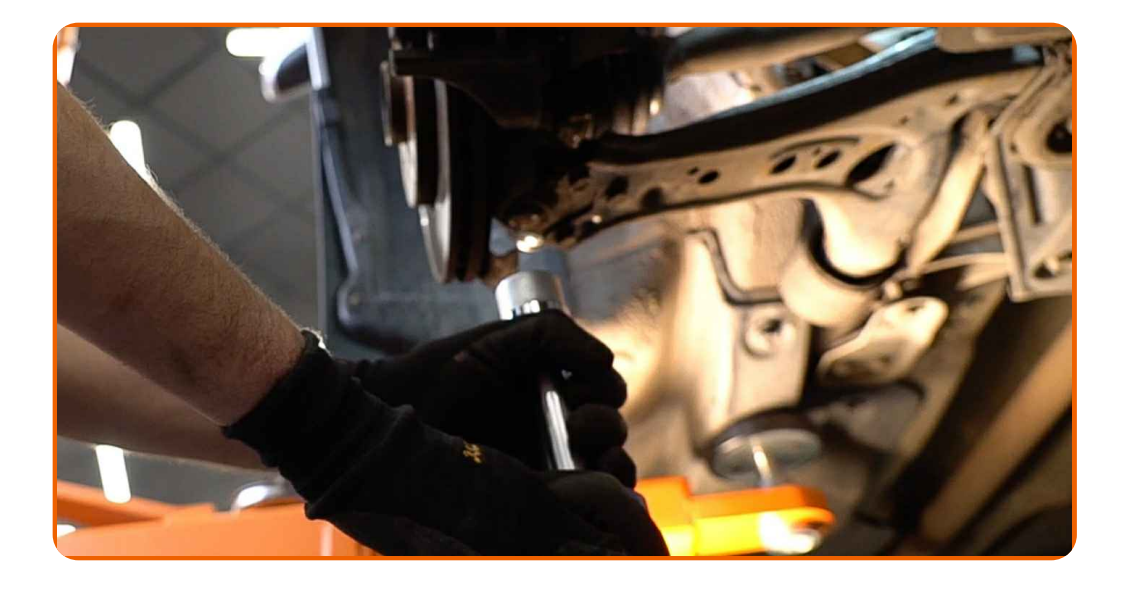


AUTODOC recommends:

- Replacement: anti roll bar bushes – Skoda Fabia 6Y5. Lower the transmission jack smoothly, without jerks, to avoid damaging components and mechanisms.


11 Remove the stabilizer bush brackets. Use a crowbar.

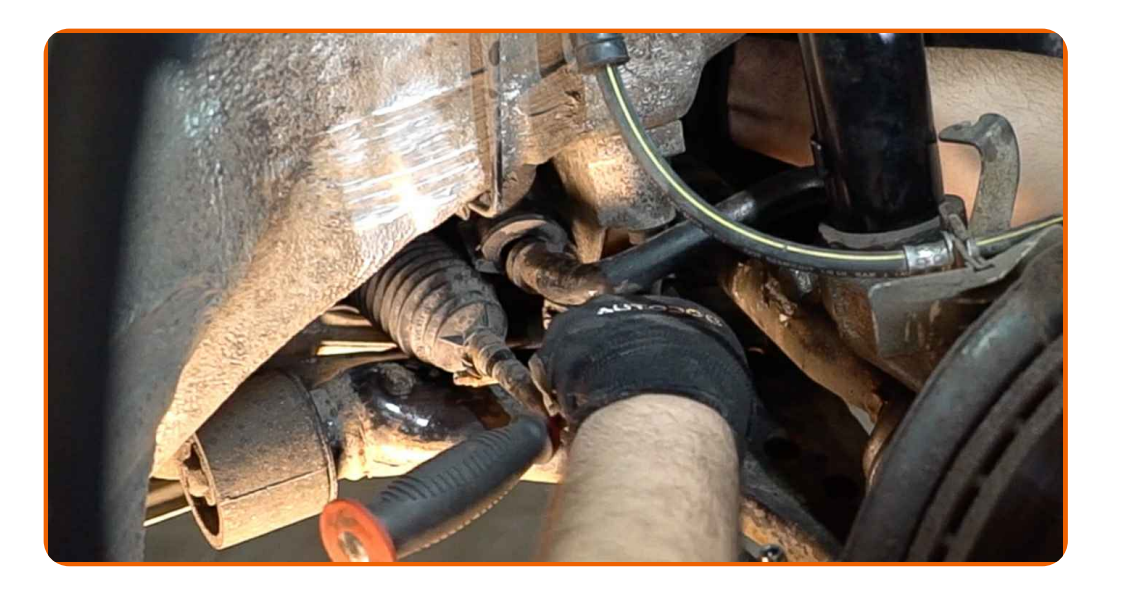


12 Remove the stabilizer bushes.

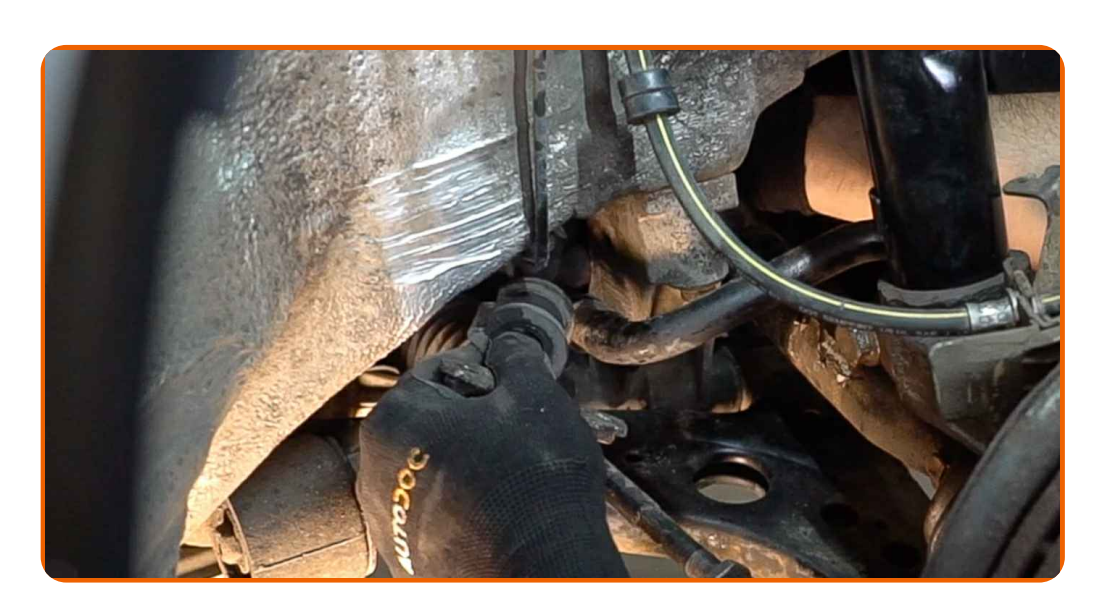

13 Install the new stabilizer bushes.

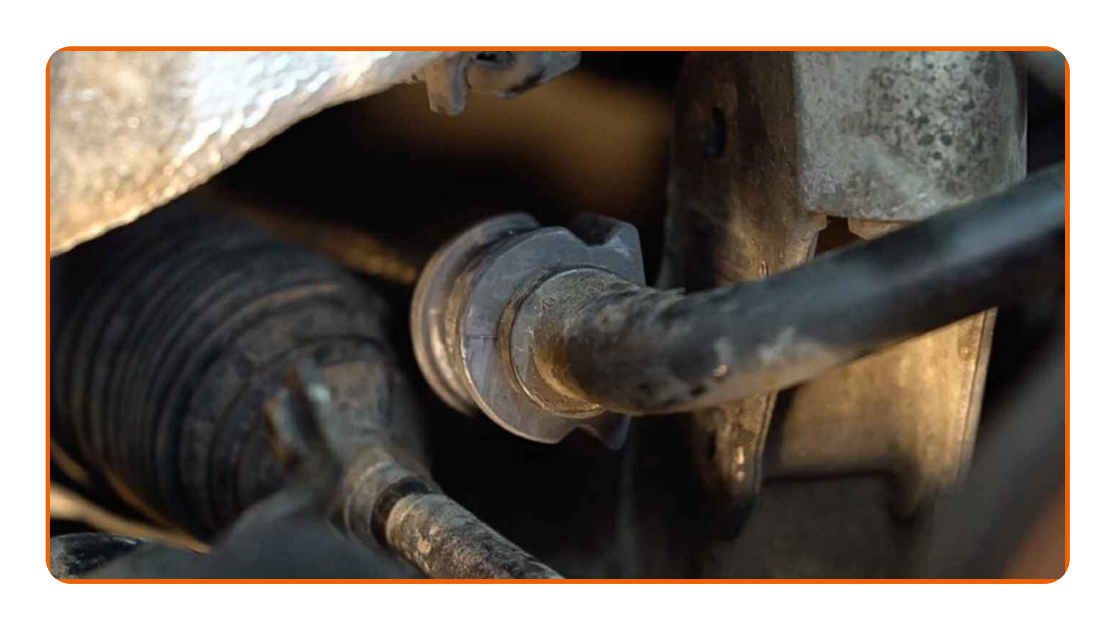


14 Install the stabilizer bush brackets.

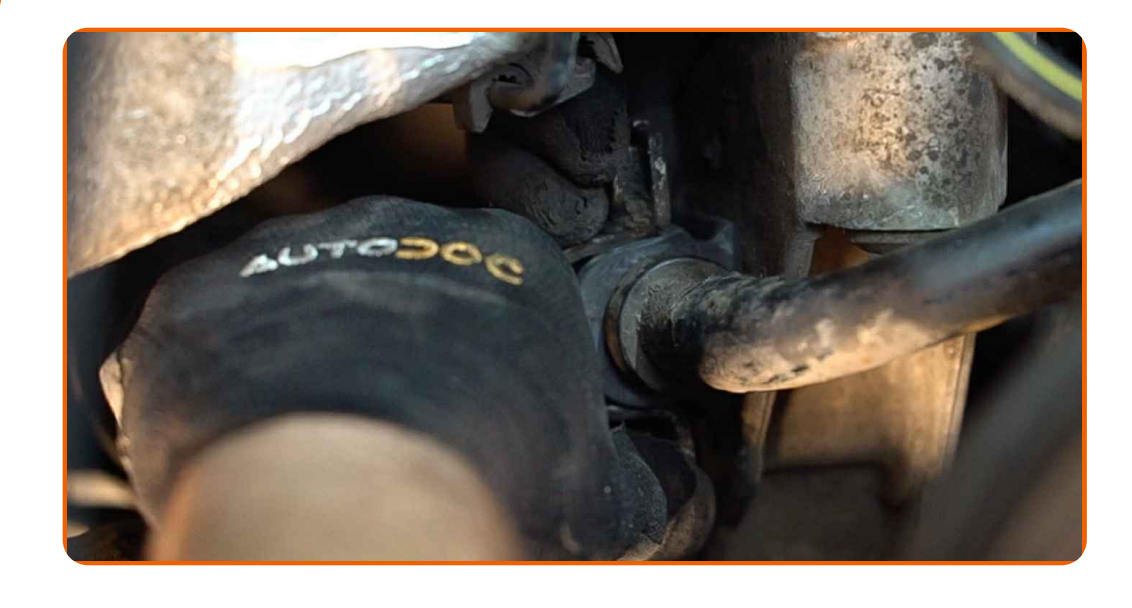


15 Support the arm. Use a hydraulic transmission jack.



16 Install the fastening bolts (2 pieces). Use a crowbar.

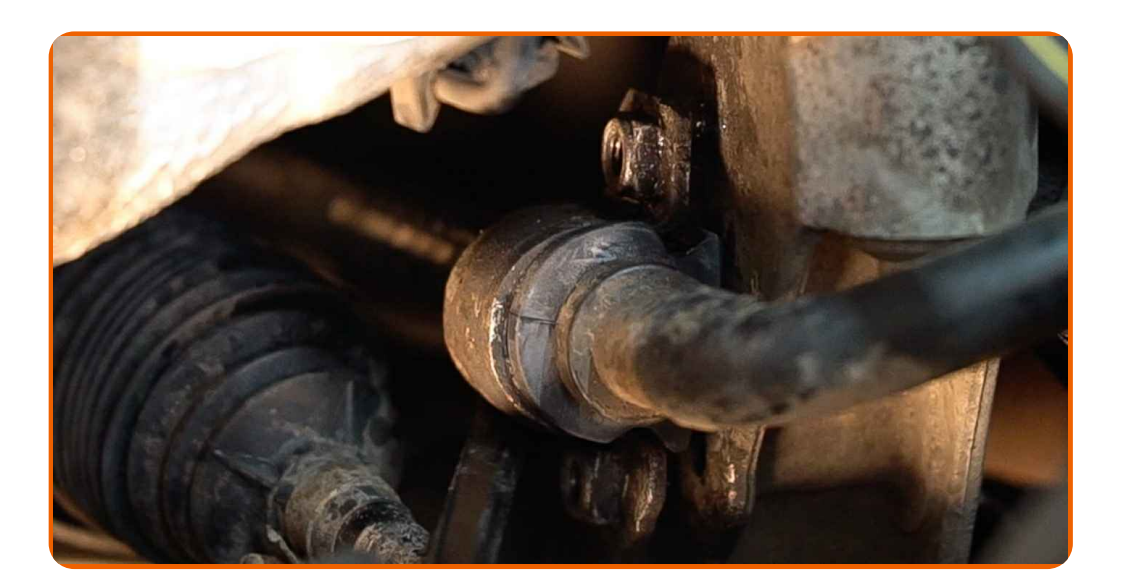


17 Screw the fasteners of the stabilizer bush brackets. Use a drive socket #13. Use a torque wrench. Tighten it to 20 Nm torque.+90°

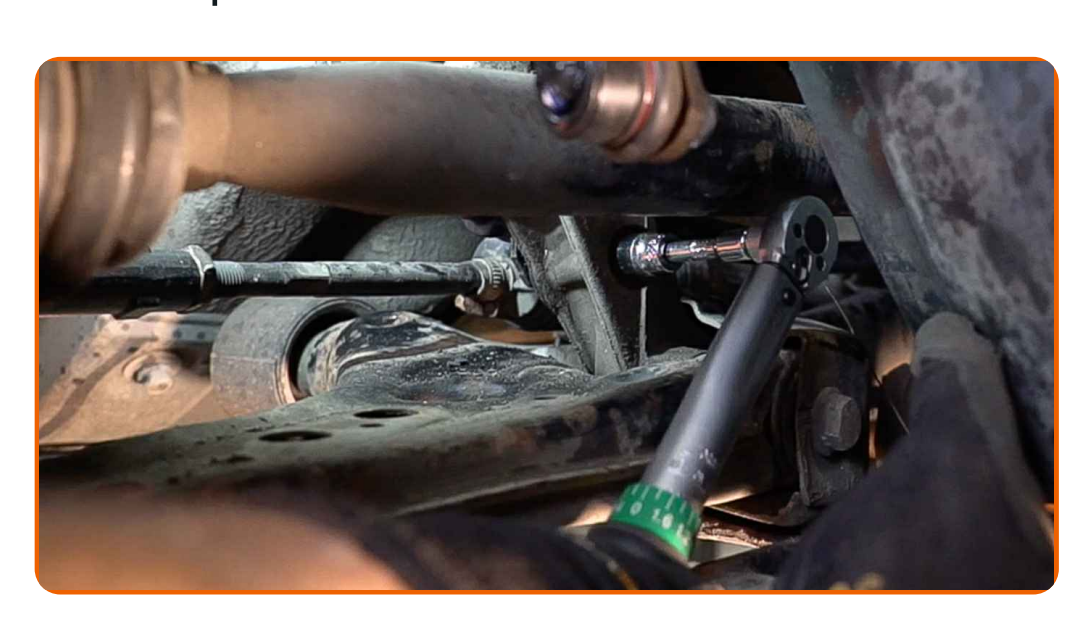

Replacement: anti roll bar bushes – Skoda Fabia 6Y5. AUTODOC recommends:

- Important! Be sure to use new fasteners.


18 Remove the support from under the arm.

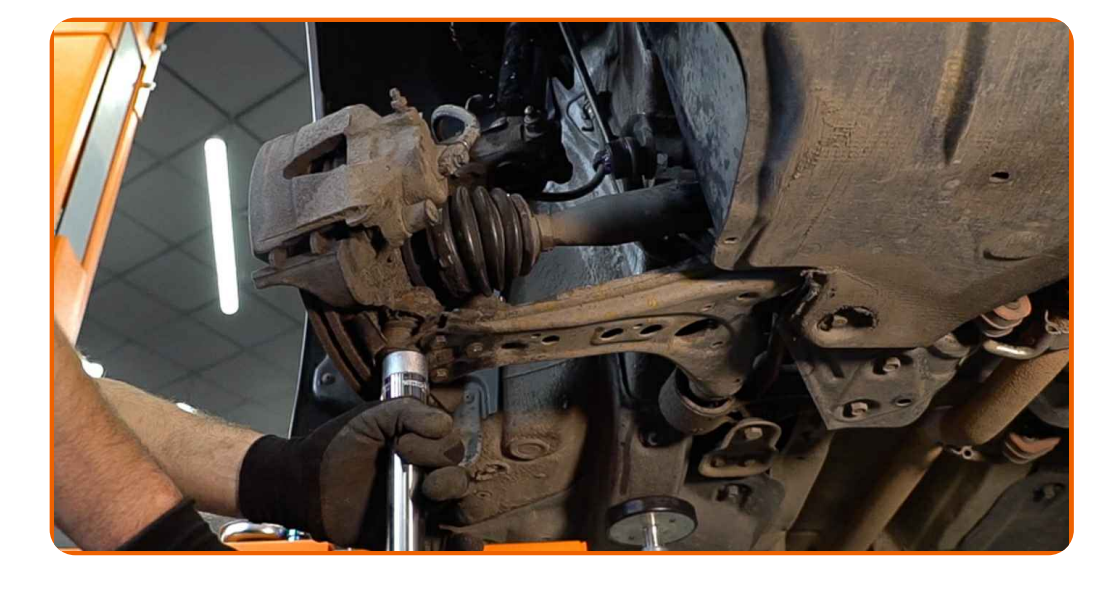

AUTODOC recommends:

- Skoda Fabia 6Y5 – Do not lower the transmission jack sharply to avoid damaging components and mechanisms of the car.


19 Clean the wheel rim mounting seat. Use a wire brush.

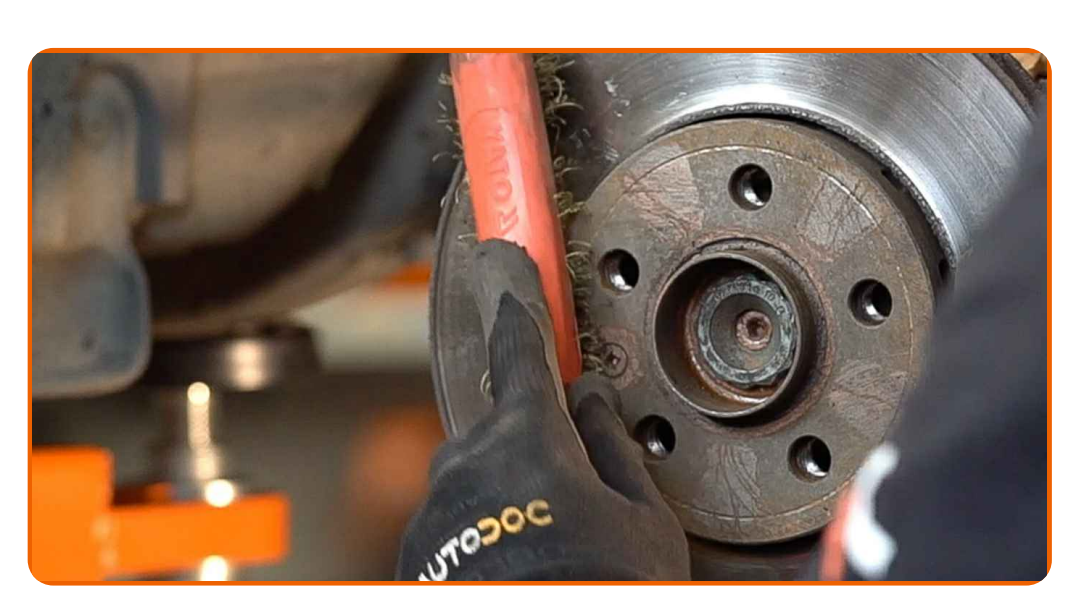

20 Treat the surface where the brake disc contacts the wheel rim. Use copper grease.




21 Install the wheel.

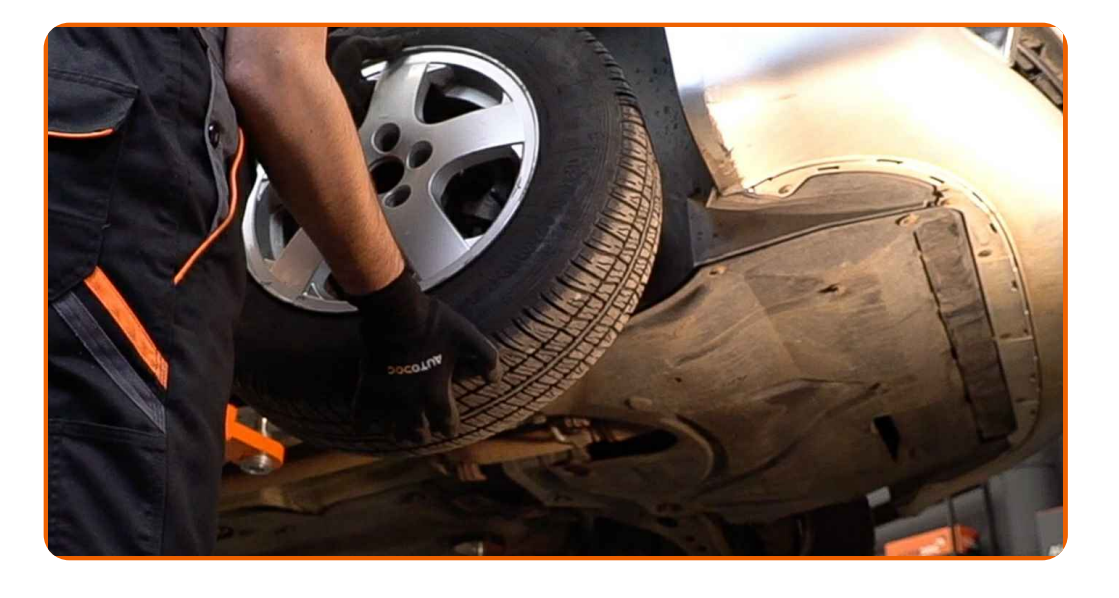


Replacement: anti roll bar bushes – Skoda Fabia 6Y5. Tip from AUTODOC experts:

- To avoid injury, hold up the wheel when screwing in the fastening bolts.

22 Screw in the wheel bolts. Use wheel impact socket #17.

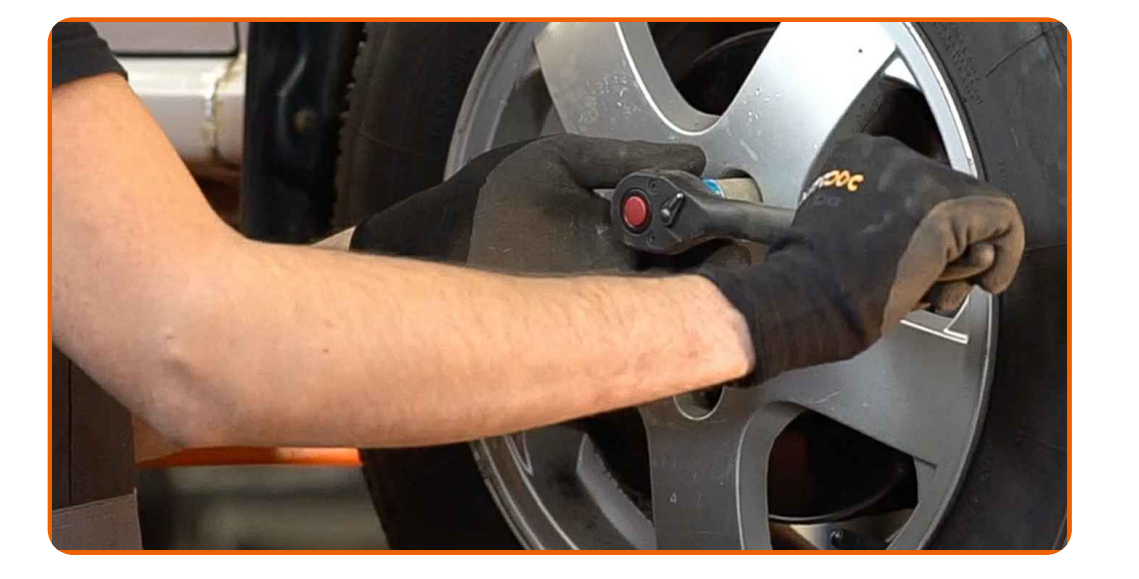

23 Lower the car and working in a cross order, tighten the wheel bolts. Use a torque wrench. Tighten it to 120 Nm torque.

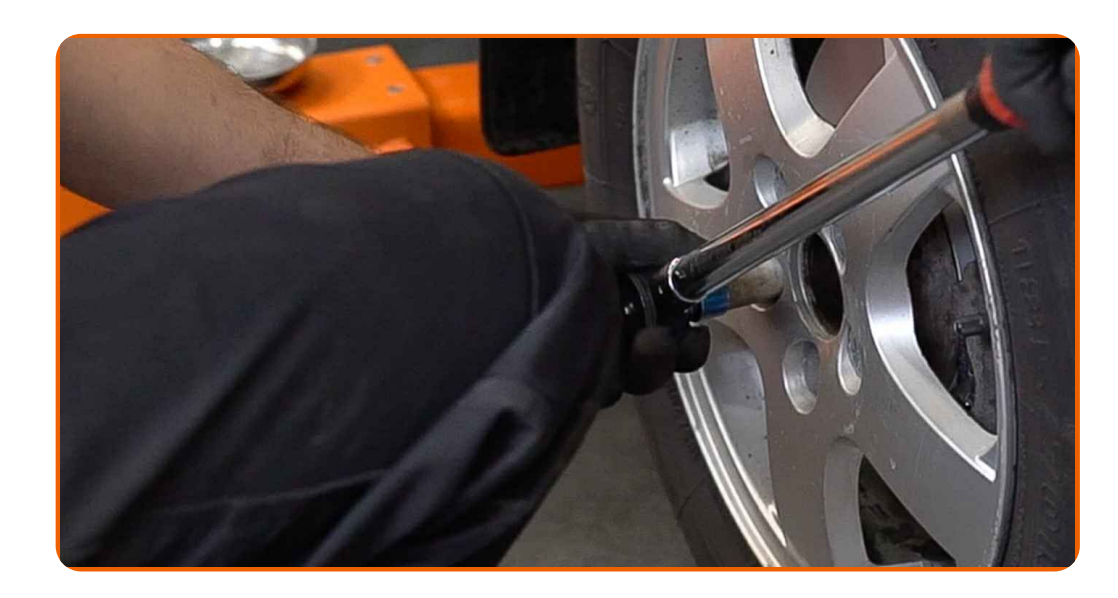

24 Remove the jacks and chocks.



WELL DONE!



VIEW MORE TUTORIALS

AUTODOC — TOP QUALITY AND AFFORDABLE CAR PARTS ONLINE

AUTODOC MOBILE APP: GREAT DEALS AND CONVENIENT SHOPPING



A GREAT SELECTION OF SPARE PARTS FOR YOUR CAR

BUY SPARE PARTS FOR SKODA

ANTI ROLL BAR BUSHES: A WIDE SELECTION

CHOOSE CAR PARTS FOR SKODA FABIA 6Y5

ANTI ROLL BAR BUSHES FOR SKODA: BUY NOW

ANTI ROLL BAR BUSHES FOR SKODA FABIA 6Y5: THE BEST DEALS & OFFERS

ⓘ DISCLAIMER:

The document contains only general recommendations that may be useful for you when you perform repair or replacement work. AUTODOC shall not be liable for any loss, injury, damage of property occurring in the repair or replacement process due to incorrect use or misinterpretation of the provided information.

AUTODOC shall not be liable for any possible mistakes and uncertainties in this guide. The information provided is for information purposes only and cannot replace advice from specialists.

AUTODOC shall not be liable for incorrect or hazardous usage of equipment, tools and car parts. AUTODOC strongly recommends to be careful and observe the safety rules when performing repair or replacement works. Remember: usage of low quality auto parts does not guarantee you the appropriate level of road safety.

© Copyright 2022 – All the contents of this website, in particular texts, photographs and graphics, are protected by copyright. All rights, including reproduction, publication, editing and translation rights, are reserved by AUTODOC GmbH.